



INSTRUCTIONS

INSTRUCTION MANUAL

1. Fill the bottle with detergent & water. We recommend 25% detergent/ 75% water ratio.

TIP: Fill bottle with warm water before adding detergent/soap.

2. Attach the foam cannon to the pressure washer. Apply the foam over desired area and let soak for about 5 minutes and rinse with water.

3. After rinsing, fill the bottle with warm water and let the water rinse through the foam cannon. This will prevent clogging and prolong the life of the Foam King cannon.

4. To adjust the amount of foam, use the dial knob at the top. Turning the knob towards (+) will produce more foam, whereas turning it towards (-) will produce less foam.

Care Instructions:

Thoroughly rinse and spray warm water through the foam cannon after each use to remove excess detergent and buildup. If there is discontinuous or even no foam, screw the pressure dial knob to '-' and use a needle/paperclip to unblock the particles jammed inside the nozzle.

